
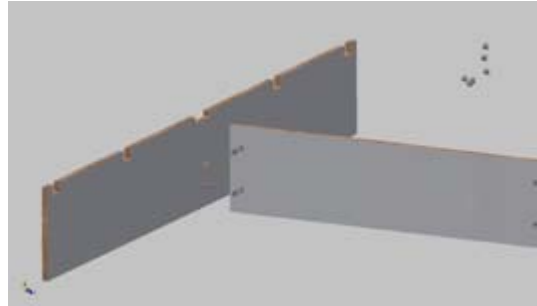




BIG BOX

If the bed is delivered with headboard: see instructions on the following page


- Assemble respectively a long part with a short piece (the ones without notches) with bench screws and a wood dowel.

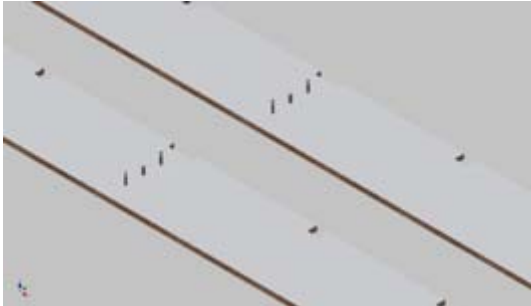


- Now fasten both parts to the middle part (long, 2 x pre-drilled) with bench screws.

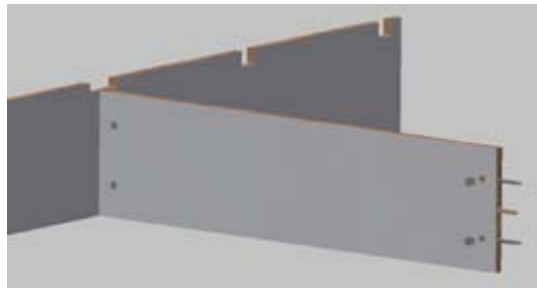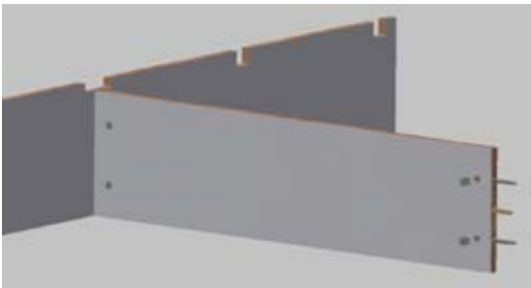

- The bearers of multiplex are positioned.

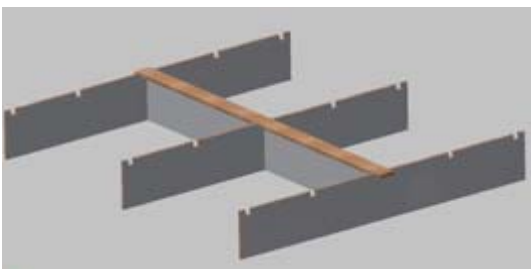




- The four steel bearers are screwed into the basic construction.

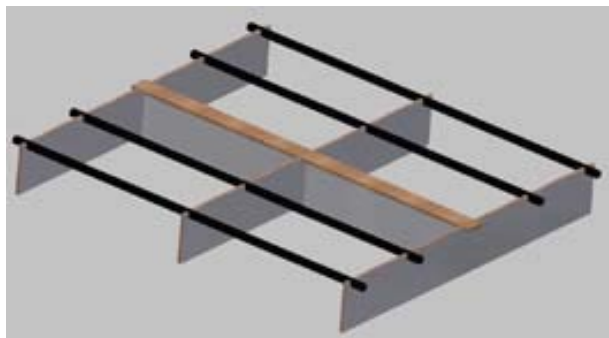

Big BOX for bed with headboard

If the bed is delivered with a headboard: at first, the headboard cabinet for the headboard fittings must be assembled.

- Use the headend part with the pre-drilled holes for the headboard fittings.
- Fasten the headboard fittings on the correct side so that the fittings are placed inside the cabinet.
- Cover with a deck plate

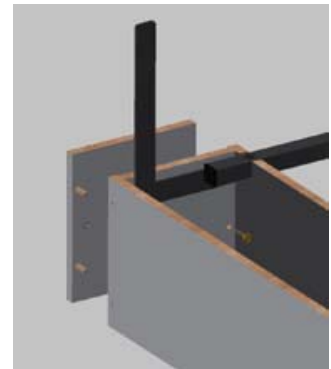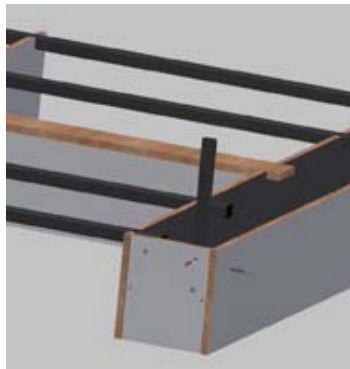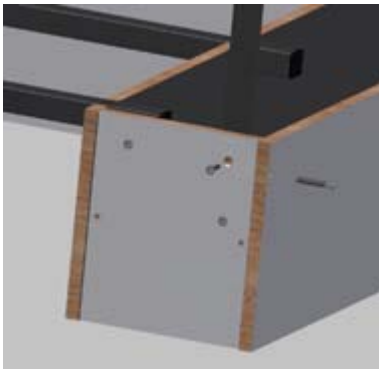


- For assembly of the rest of the base: see previous page

Big BOX drawers

- Fasten the castors to the bottom of the drawers with screws using the pre-drilled holes. (1)
- Assemble the drawers by attaching the drawer backs with the sides using 2 wood dowels. (2)
- Push the bottom of the drawers into the milling.




(1)

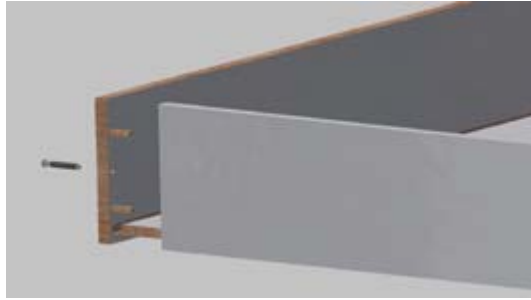


(2)

- Fasten the handles of the drawers from the inside of the drawer with screws (3) and secure the drawer front with bench screws and 2 wood dowels. (4)

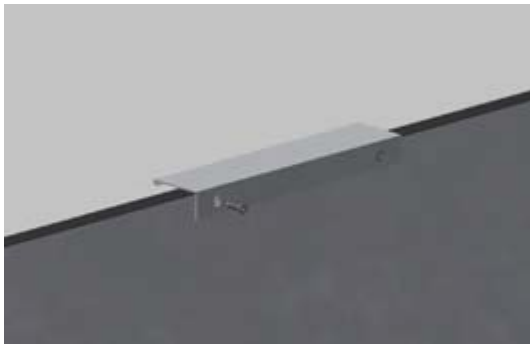

(3)

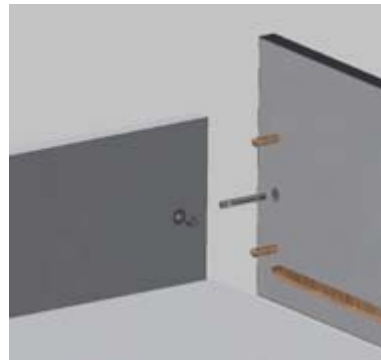

(4)

- An angle bracket is placed where it has been marked on the drawer front and the bottom. This provides stability to the drawer. (5)



(5)